

 
Start Here

# Quick Start



---

## Getting to know your tablet

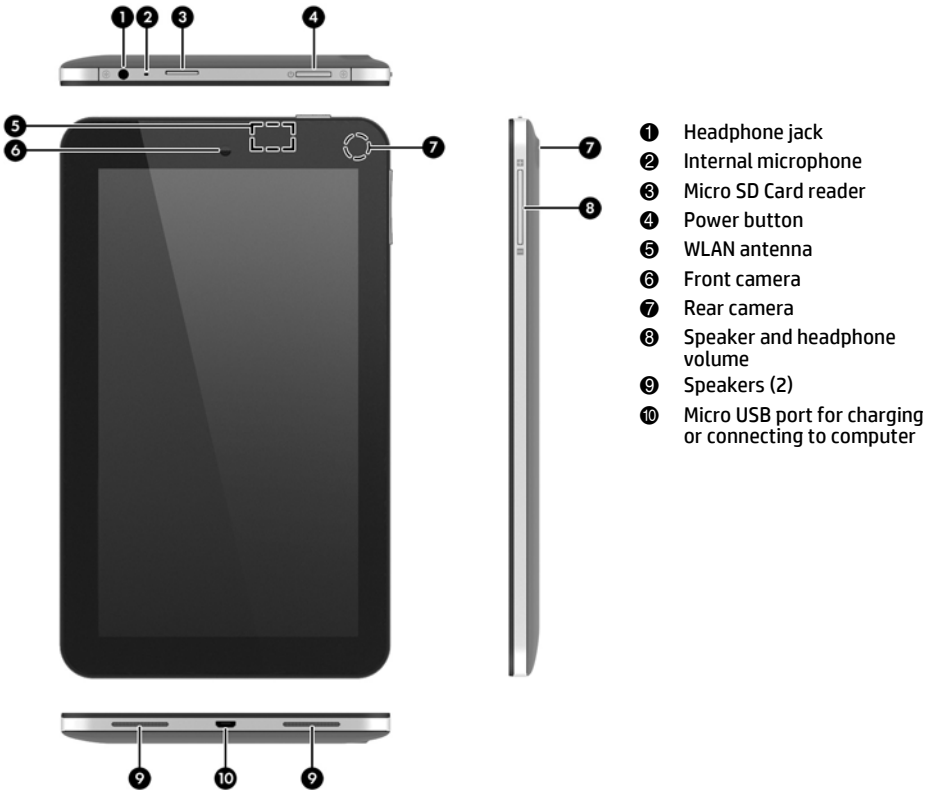

## Locate serial number, product number, and model number

The serial number and product number of your tablet are located on the left edge of the tablet. The model number of your tablet is located on the back of your tablet. You may need the information when you travel internationally or when you contact support.

---


## Setting up your tablet

### Charge the battery and turn on the tablet



1. Connect the micro USB cable to the tablet and to the adapter, and then connect the adapter to a power outlet.
2. Press the power button on the top edge to turn on the tablet. The first time you turn on the tablet, you will see a Welcome screen.
3. Follow the on-screen instructions to select a language.

---

 The HP 5V 2A adapter included with your tablet is recommended for charging the tablet.

---


### Shut down the tablet

Press and hold the power button, and then touch **Power off**.

If your tablet becomes unresponsive, press and hold the power button for several seconds to shut down the tablet.

### Connect to a wireless network

---

 You must be connected to a wireless network before you can connect to the Internet.


---

1. To connect to a wireless network, touch the **All apps** icon, touch **Settings**, and then touch **Wi-Fi**.
2. Be sure that Wi-Fi is turned on.
3. Select a network from the available networks that are displayed.
4. Type the security key if required, and then touch **Connect**.

### Sign in

1. On the sign-in screen, enter your Google™ username and password.
2. If you do not have a Google account, you can create one now.

---

 The email, contacts, calendar, and data that are associated with that account will be synchronized automatically.

---

# Using the Home screen

## Unlock

 
Press the power button, place your finger on the lock icon, and then slide your finger to the unlock position.

## Lock


Press the power button.

## Navigate the Home screen

The Home screen provides a central location where you can access information and email, browse the Web, stream videos, view photos, and access social media websites.

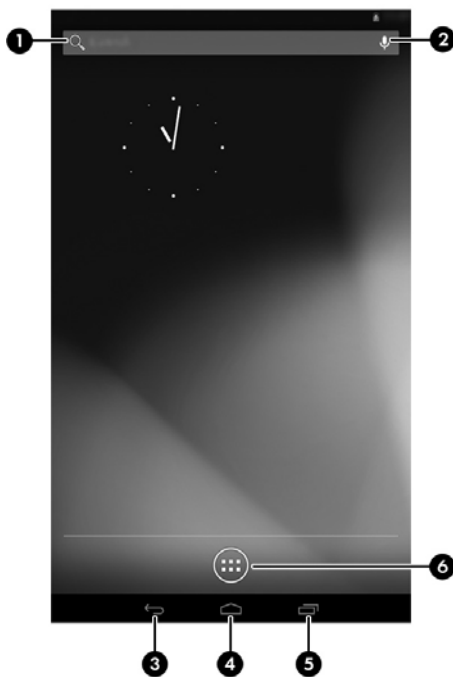

Icon	Description
1 Search	Type one or more keywords to search with Google.
2 Voice search	Speak one or more keywords to search with Google.
3 Back	Opens the previous screen.
4 Home	Opens the Home screen.
5 Recent apps	Opens a list of apps that you have used recently.
6 All apps	Displays a list of all the apps installed on the tablet.

 The appearance of the Home screen may vary.

---

## Use gestures



Use the single tap to make an on-screen selection or to open an app.



Use scrolling to move up, down, left, or right on a page or image.



Use pinching and stretching to zoom in and out on images or text.

## Return to the Home screen

To quickly return to the Home screen, touch the **Home** icon.

## Display apps, widgets, and notifications

**Apps**—Touch the **All apps** icon, and then touch the **Apps** tab to see a list of all apps.

**Widgets**—Touch the **All apps** icon, and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top of the screen to see your notifications.

## Configure preferences

Touch the **All apps** icon, and then tap the **Settings** icon to configure your preferences.

## Organize the Home screen


- To add an app or a widget to the Home screen, touch the **Apps** tab or the **Widgets** tab, and then tap and hold an app or widget until it is added to the Home screen.
- To move an app or widget, drag it to a different area of the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the screen.

## Download apps from the Google Play<sup>™</sup> Store

The Play Store provides many apps that you can download to your tablet.

1. On the Home screen, touch **All apps**, and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon, and then type a keyword, or touch a category to narrow your search.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install. When the installation is finished, the app appears on the Home screen.

---

 You must be connected to a wireless network and signed into a Google account before you can access the Play Store. To create a Google account, go to <http://www.google.com>.

---

---

## Take photos

1. Touch the **All apps** icon, and then touch the **Camera** icon to open the Camera app.
2. To take a photo with the rear camera, focus on the subject, and then touch the blue circle. The photo is saved in the Gallery.
3. To take a photo with the front camera, touch the rotating camera icon above the blue circle, and then touch the blue circle to take a photo. The photo is saved in the Gallery.

## View photos

 
To view the photos in your Gallery, touch the **All apps** icon, and then touch the **Gallery** app.

## Print photos

1. Touch the **All apps** icon, and then touch the **Gallery** icon.
2. Touch the photo to select it, touch the **Menu** icon in the upper-right corner, and then touch **Print**.  
-or-  
Activate HP e-Print, which allows you to print directly to an HP ePrint-enabled printer. For more information, go to <http://www.hp.com/go/2eprint> (English only).

## Use the on-screen keyboard

Touch a text field to open the on-screen keyboard. Some apps may open the keyboard automatically.

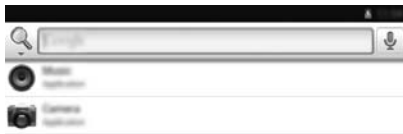


## Change your tablet's view

1. To change the view of your tablet from portrait view to landscape view, hold the tablet vertically, and then turn it 90 degrees to the left (in a counter-clockwise direction).
2. To change the view of your tablet from landscape view to portrait view, hold the tablet vertically, and then turn it 90 degrees to the right (in a clockwise direction).

# Use Beats Audio

- 1.Touch the **All apps** icon, and then touch the **Settings** icon.
- 2.To turn on Beat Audio, under **DEVICE**, touch **Beats Audio**.
- 3.Touch **Beats On-Ear**, **Beats In-Ear**, or **Beats Passive** to select the mode that you want to use.

 Optional headphones (purchased separately) can be used to obtain maximum benefit from Beats Audio.

# More HP resources

Resource	Contents
HP worldwide support For U.S.support, go to <a href="http://www.hp.com/go/contact HP">http://www.hp.com/go/contact HP</a> . For worldwide support, go to <a href="http://welcome.hp.com/country/us/en/wwcontact_us.html">http://welcome.hp.com/country/us/en/wwcontact_us.html</a> .	<ul style="list-style-type: none"><li>■ Online chat with an HP technician.</li><li>■ Email support.</li><li>■ Find telephone numbers.</li><li>■ Locate HP service center locations.</li></ul>
Google For Google support, go to <a href="http://www.google.com/mobile/android">http://www.google.com/mobile/android</a> .	<ul style="list-style-type: none"><li>■ Access Google online help and support.</li></ul>
Regulatory, Safety and Environmental Notices This document is provided in the box.	<ul style="list-style-type: none"><li>■ Important regulatory notices.</li></ul>
Limited Warranty This document is provided in the box. You can also go to <a href="http://www.hp.com/go/orderdocuments">http://www.hp.com/go/orderdocuments</a> .	<ul style="list-style-type: none"><li>■ Warranty information about this tablet.</li></ul>

# Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the tablet, please contact your local point of sale (the seller).

# Specifications

The power information in this section may be helpful if you plan to travel internationally with the tablet.

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz.

The tablet can operate on DC power using an industry-standard micro-A or micro-B USB cable.

 The HP 5V 2A adapter included with your tablet is recommended for charging the tablet.

Factor	Metric	U.S.
<b>Temperature</b>		
Operating	0°C to 40°C	32°F to 104°F
<b>Relative humidity</b> (noncondensing)		
Operating	10% to 90%	10% to 90%

Replace this box with PI statement as per spec.  
Replace this box with PI statement as per spec.  
Replace this box with PI statement as per spec.  
Replace this box with PI statement as per spec.  
Replace this box with PI statement as per spec.

Second Edition: April 2013  
First Edition: March 2013



725391-002

© Copyright 2013 Hewlett-Packard Development Company, L.P.

Google, Android, and Google Play are trademarks of Google Inc.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.